

ChangeFit System High versatility for different fittings

Innovative pad-arm system for Injection Frames







Versatile Pad-arm System

PRODUCT FEATURES



EASY TO APPLY, EASY TO REPLACE

The pad-arm system can be easily mounted on the frame by hand in **two steps**: just position it at 90° in the cavity and secure the system by inserting the lens.





1_ Place the pad-arm inside the cavity



The Pad-arm is locked in position by the lens, without any tension.

- It can be used with all organic lenses
- It does not interfere with the lens cutting process

It is at any time possible to replace the pad-arm system with a different one by removing the lens.





Versatile Pad-arm System

BENEFITS

DELAYED DIFFERENTIATION

The decision on different pad-arm structures can be postponed to the end of the process. Even beyond the production line, till the shop and to the final consumer.

VERSATILITY

By choosing the most suitable pad-arm system, after fine registration one frame can fit a broad range of face morphologies.

MODEL STANDARDIZATION

A single design of frame can cover a wide range of fit (from Asian, to Caucasian, to children).

ASSORTED VARIETY

We offer the possibility of choosing the best match with our wide standard offer of pads, including different shapes and sizes, different materials, attachments and personalizations.

INTUITIVE

To assemble and disassemble the pad-arm system to the frame is easy, fast and intuitive. In case of necessity, the ChangeFit system can be replaced manually on spot.

DISCRETE LOOKING

All the above benefits are embodied in a minimalist style without interfering with the frame design.





Versatile Pad-arm System

PRODUCT SPECIFICATIONS



STEM SHAPES AND ATTACHMENTS



SCREW SYSTEM 2D and 3D (Mini box)



CLICK SYSTEM 2D and 3D

Basic offer.
Customized stem shapes available on request.

ERGOFEEL® SYSTEM

The new self-adapting system is recommended for minimizing the registration process.





CONSTRUCTION AND FINISHING

Slim stem in MONEL Ø0.90 mm



Offered in two different finishing:


- · Uncoated Pad-arm
- Coated Pad-arm: nickel plating plus transparent varnishing.

 The two treatments guarantee a better resistance to corrosion.



Versatile Pad-arm System

STANDARD OFFER

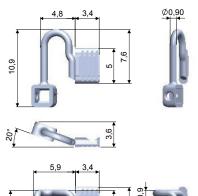


SCREW SYSTEM RAW: 18PDC8936A1BY0 SCREW SYSTEM COATED: 18PDC8936A2BN0

Stem code: 18SEC8933A1BYX

Stem shape: 214 Stem ø 0.9

Stem alloy Monel NiCu30Fe Screw: Minus screw

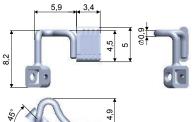


SCREW SYSTEM RAW: 18PDC8935A1BY0 SCREW SYSTEM COATED: 18PDC8935A2BN0

Stem code: 18SEB1269A1BY0

Stem shape: 310 Stem ø 0.9

Stem alloy Monel NiCu30Fe Screw: Minus screw

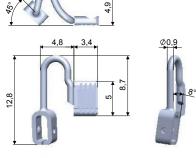


CLICK SYSTEM RAW: 18PDC8934A1BY0 CLICK SYSTEM COATED: 18PDC8934A2BN0

Stem code: 18SEC8933A1BYX Stem shape: 214

Stem ø 0.9

Stem alloy Monel NiCu30Fe

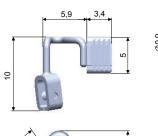




CLICK SYSTEM RAW: 18PDC8930A1BY0 CLICK SYSTEM COATED: 18PDC8930A2BN0

Stem code: 18SEB1269A1BY0

Stem shape: 310 Stem ø 0.9


Stem alloy Monel NiCu30Fe



MINUS SCREW

07VIC9332A1BYX

Material: Stainless steel

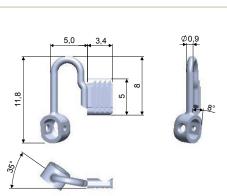


ERGOFEEL SYSTEM RAW: 18PDC8937A1BY0 ERGOFEEL SYSTEM COATED: 18PDC8937A2BN0

Stem code: 18SEC8933A1BYX

Stem shape: 214 Stem ø 0.9

Stem alloy Monel NiCu30Fe Screw: Ergofeel screw



ERGOFEEL SCREW 07VIC9331A1BYX

Material: Stainless steel

sales@visotticacomotec.com

sales@visotticacomotec.hk

COMOTEC Optical Products (Dongguan) Ltd.

Visottica Industrie S.p.a.

O'Reilly Industrial Ltd.

Via Vecchia Trevigiana, 11

31058 Susegana

(Treviso), Italy

Tel +39 0438 6551

Fax +852 2796 4631

O'Reilly Industrial Ltd.

COMOTEC Optical Products (Dongs No. 23, Weijian Road, ChaShan Town, Dongguan City

Guangdong Province, China 523380

Tel +86 769 8233 9955

Fax +852 2796 4631

Fax +86 769 8233 9977 sales@visotticacomotec.hk